Serial No.: 10/616,030
Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

1/6


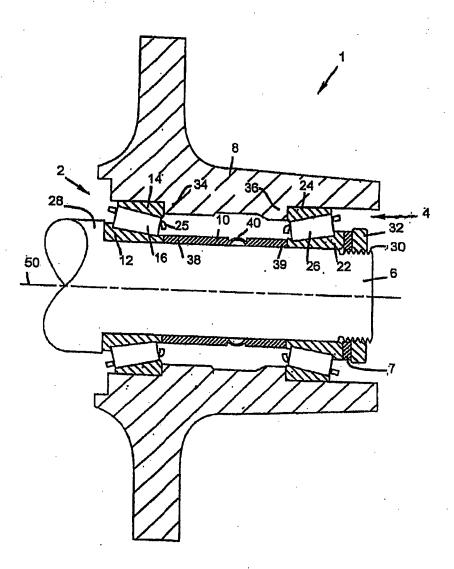


FIG. 1

PRIOR ART

Applicant – Strait
Serial No.: 10/616,030
Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

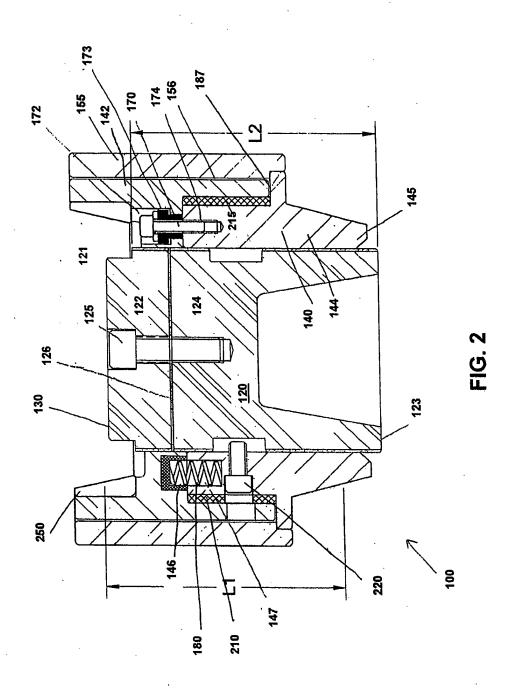

Serial No.: 10/616,030
Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

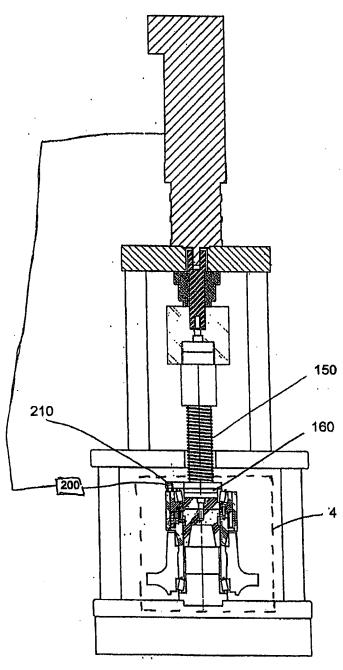


FIG. 3

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer


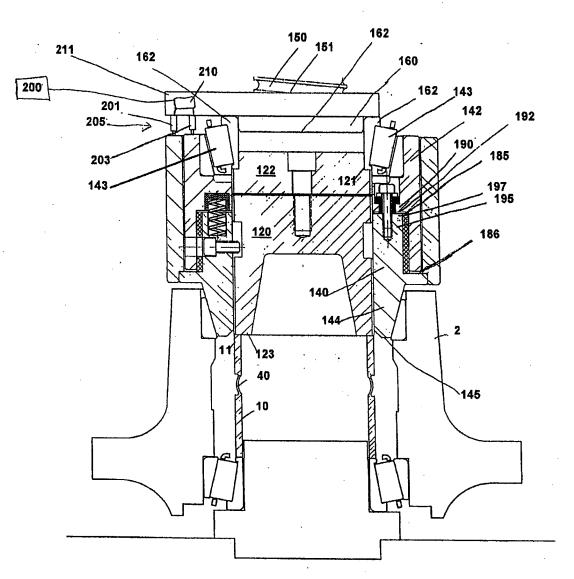


FIG. 4

Serial No.: 10/616,030
Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

- 5/6

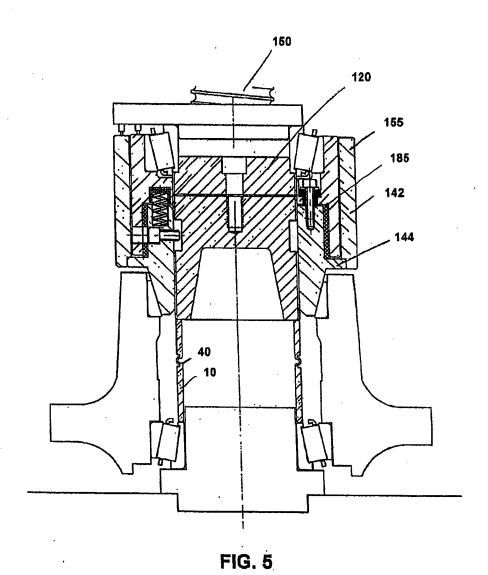

Applicant – Strait
Serial No.: 10/616,030
Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

